

Front-end Loader Assembly Instructions

Parts List – (Number of parts in brackets)

Wheels

A – Wheel Locks – (12)

B – Spacer Collars – (8)

K – Rear Axle – (1)

L – Front Axle – (1)

V – Outer Wheel Disk – (4)

W – Inner Wheel Disk – (4)

X – Centre Wheel Disk – (4)

Y – Inner Wheel Disk – (4)

Z – Outer Wheel Disk – (4)

NOTE: The wheel disks are different sizes. Make certain that you assemble them correctly.

On each axle, the sequence is b, v, w, x, y, z, b. Make certain that the wheel locks (a) are aligned correctly.



