

## **Battle Tank Assembly Instructions**

NOTE: Wood glue such as Genkem Quickset Woodweld is required for this assembly.

### Turret Assembly – (Number of parts in brackets)

A – Turret Locking Pins (2)

B – Turret Locking Collar (1)

C – Turret Spacers (3)

D – Turret Collar (1)

E – 1 to 5 – Turret components (5)

F – Gun Barrel Locator Plates (3)

G – Flash Breaker – Small (3)

H – Flash Breaker – Large (3)

J – 8mm Dowel Gun Barrel (1)

K - Entry Hatch (1)

L – Inspection Hatch (1)

### Method

Press the two locking pins (1) through the slots in locking collar B. Attach turret spacer C, then turret collar D, and the remaining two spacers C.

Attach Turret Components E, starting with E1, and continue in numerical order to E5.

Fit the three gun barrel locator plates F into the front slot (a).


Attach final turret piece E6.

Glue Entry Hatch K and Inspection Hatch L to E6.

Glue the small flash Breaker rings G together and slip onto barrel J.

Glue 3 flash breaker rings H to together and fit to barrel J.

Put some glue in the holes of the gun barrel locator plates F and press the barrel in.

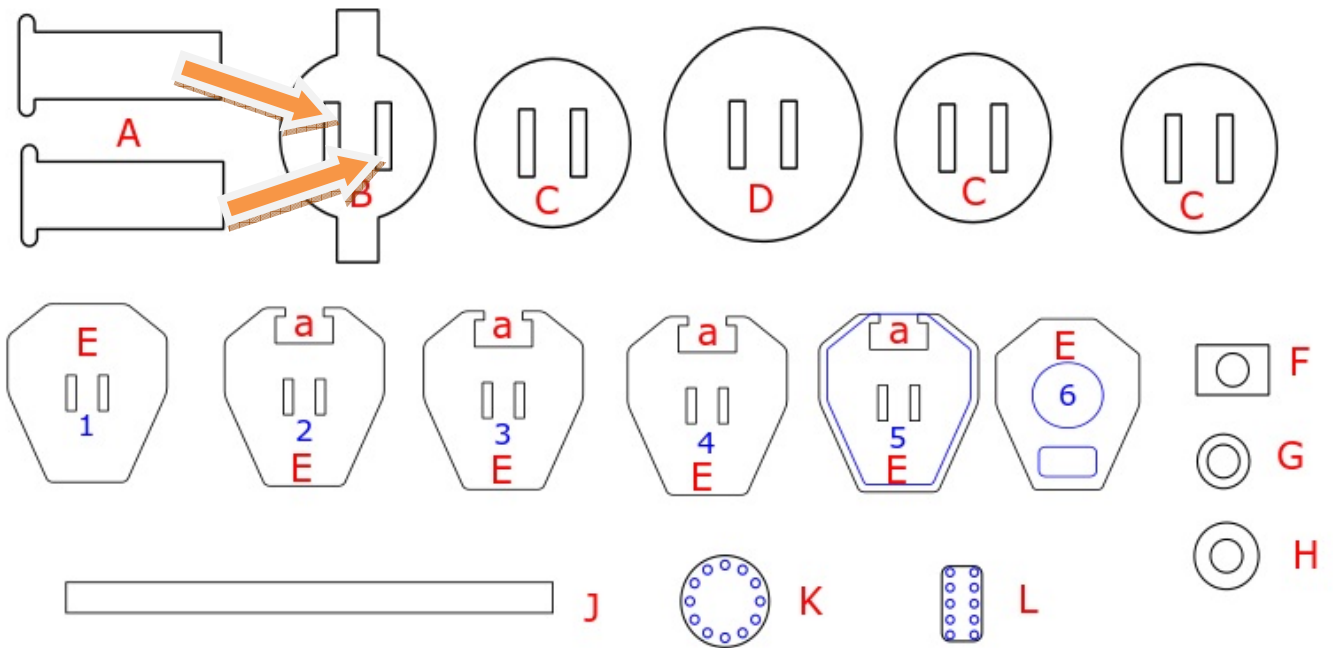

## **Body Assembly**

- 1 – Body Inner Panel (2)
- 2 - Body Outer Panel (2)
- 3 – Body Panel Spacer (4)
- 4 – Body Detail Frame (2)
- 5 – Body Top Panel (1)
- 6 – Body Upper Front Panel (1)
- 7 – Body Lower Front Panel (1)
- 8 – Body Lower Panel (1)
- 9 - Body Lower Rear Panel (1)
- 10 – Body Upper Rear Panel (1)
- 11 – Engine Cover Side Panel (2)
- 12 – Engine Cover Top Panel (1)
- 13 – Engine Cover Rear Panel (1)
- 14 – Track Plate (68)
- 15 – Exhaust Pipe (4)

- 16 – Tow Hook Attachment (2)
- 17 – Sponson Gun Mounts – top & bottom (4)
- 18 – Sponson Gun Mount – rear plate (2)
- 19 – Sponson Gun Mount – side plate (2)
- 20 – Sponson Gun (2)
- 21 – Sponson Gun Barrel Pieces (12)

## **Method**

Attach body panel spacers 3 to Body Inner Panel 1 G, as shown.

Attach Body Outer Panel 2 G to Body Panel Spacers 3.

Attach Body Detail Frame 4 to completed assembly using the blue line to align the frame.

Attach Track Plates 14 to 1H of the completed assembly.

Lay one side panel assembly on its side and start attaching the body panels 5 through 10, aligning panel 5 to 1A, panel 6 to 1B etc. Continue until all panels have been attached to one side. Now attach the second completed assembly to the body panels.

Take care to align Body Lower Front Panel 7 so that the two slots are uppermost.

Attach Engine Side Cover Panels 11 to Body Upper Rear Panel 10.

Attach 12 and 13 to top and rear of 11.

Glue 2 of Exhaust 15 together and then fit to the holes in 9.

Attach Tow Hook Attachment 16 to Body Lower Front Panel 8.

Assemble Sponson Gun by attaching Barrel Pieces 21 to 20, six to each gun.

Attach 2 x part 17 to the completed sponson gun, ensuring that the holes face to the front of the tank, aligning 18e with 17e top and bottom pieces. Fit 19, aligning 19c with 18c and 19d with 17d.

Attach the completed assembly to the side panel 2, fitting 17a to 2a, 18b to 2b. Ensure that the gun can swivel.

Repeat for second sponson gun.

Fit the assembled turret to the body.

